
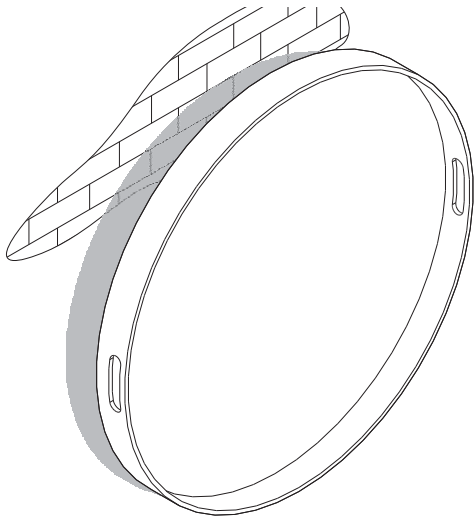






# Ethnicraft





## ASSEMBLY INSTRUCTION FOR TRAY INSTALLATION




### HARDWARE ENCLOSED

 METAL OVERHANGER 1 pc	 ALU HANGER 1 pcs
 WOOD SCREW 4 pcs	 SCREW 2 pcs (not included in package)
 WALL PLUG 2 pcs (not included in package)	

### TOOLS

 CROSS-HEAD SCREW DRIVER (not included in package)	 PENCIL (not included in package)
 DRILLING MACHINE (not included in package)	 WATERPASS (not included in package)

### NOTICE

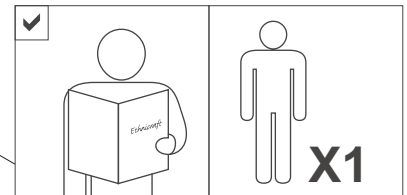


AS WALL MATERIALS VARY, SCREWS FOR FIXING TO WALL ARE NOT INCLUDED. FOR ADVICE ON SUITABLE SCREW SYSTEMS, CONTACT YOUR LOCAL SPECIALISED DEALER.

### SYMBOLS



DIRECTION



NUMBER OF  
PERSON NEEDED




USE HAND



USE DRILLING  
MACHINE




USE SCREW DRIVER  
TO TIGHTEN

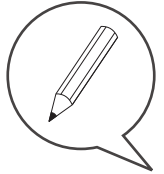

USE PENCIL

### INSTALLING ALU HANGER ON THE TRAY

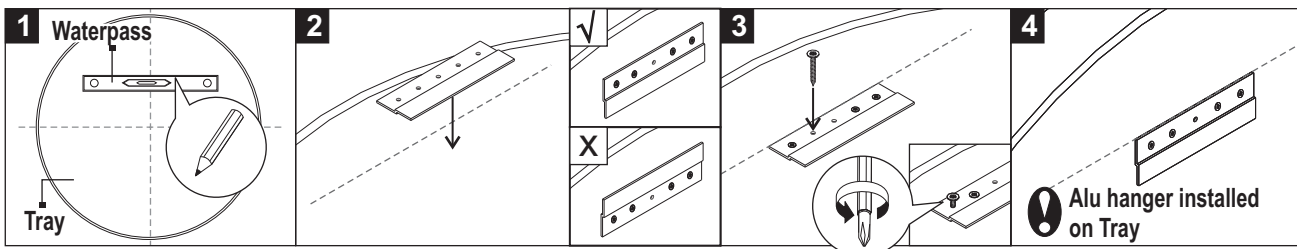

### HANGING ITEM WITH THE OVERHANGER

